

		UNICO DUAL PLUS				TABELLE RADIO RADIO TABLES			23.10.17 REV 1.17 da/from FWP039UNUN57_85		
FUNC.	CLARION	KENWOOD	JVC	PIONEER		SONY PHONOCAR VM040/VM041 Alpine IVE-W560BT IVE-W560BT-R		ALPINE	VDO	PANASONIC	
	FILO E IR	FILO E IR	FILO E IR	FILO	IR	FILO	IR	FILO E IR	IR	FILO E IR	
FLASH	1	2	3	4		5		6	7	8	
1	VOLUME —										
2	VOLUME +										
3	SEEK —										
4	SEEK +										
5	FUNC	SOURCE	SOURCE	MODE	MODE	SOURCE	SOURCE	SOURCE	SOURCE	MODE	
6	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE	
7	BAND	UP	UP	UP	BAND	UP	OFF	UP	UP	PWR	
8	DISP	VOICE	DOWN	DOWN	UP	DOWN	UP	DOWN	DOWN	PROG	
9	TA	PHONE ANSWER	PHONE ANSWER	X	DOWN	X	DOWN	PHONE ANSWER	X	X	
10	INPUT SEL	PHONE CLOSE	PHONE CLOSE	X	FUNC	X	BAND	PHONE CLOSE	X	X	
FUNC.	PANASONIC CAR AV	NOT USED	BLAUPUNKT	NOT USED	PHONOCAR VM040 ZENEC ZE-MC194	NOT USED	ECLIPSE AVN2227P AVN4429 AVN726EE <small>Solo su richiesta Only on request</small>	NOT USED	ECLIPSE AVN8826 CD8445E CD4525E AVN726EE	MACROM	NOT USED
	FILO E IR		FILO E IR		FILO E IR		FILO		IR	IR	
FLASH	9	10 11 12	13	14 15	16	17 18 19	20	21 22	23	24	25
1	VOLUME —										
2	VOLUME +										
3	SEEK —										
4	SEEK +										
5	MODE		SOURCE		SOURCE		MODE		SOURCE	MODE	
6	MUTE		MUTE		MUTE		X		MUTE	MUTE	
7	PWR		UP		UP		X		UP	UP	
8	PROG		DOWN		DOWN		X		DOWN	DOWN	
9	X		OK		BAND		X		X	PLAY/PAUSA	
10	X		X		PWR		X		X	STOP/BAND	
FUNC.	PHONOCAR 1 FORYOU CMU128 CM123 VM020 VM021 VM024	PHONOCAR 2 DM736 VM016 MACROM M-DVD4650R IR	PHONOCAR 3 ⁽¹⁾ VM029 VM030 VM031 VM032 VM036	NOT USED 29 30 31 32 33 34 35 36 37	ZENEC1 ZE-MC192 ZE-NC2040 XZENT XT8020	ZENEC2 (ZE-MC192/ SMART DIAL REMOTE CONTROL)	HARDSTONE 1 HS DPM62 HS DPM63	HARDSTONE 2 HS DPM30			
	FILO E IR	FILO E IR	FILO E IR		FILO E IR	FILO E IR	FILO E IR	IR			
FLASH	26	27	28		38	39	40	41			
1	VOLUME —										
2	VOLUME +										
3	SEEK —					DOWN		SEEK —			
4	SEEK +					UP		SEEK +			
5	MODE	MODE	MODE		SOURCE	OK (CONF.SEL)	MODE	SRC			
6	MUTE	MUTE	MUTE		MUTE	MEMOR. RADIO	MUTE	MUTE			
7	PLAY/PAUSE	PLAY/PAUSE	PLAY/PAUSE		BAND/STOP	X	BAND	BAND			
8	BAND	BAND	BAND		DOWN	X	<<	RDM			
9	INT	REPEAT	PHONE ANSWER		UP	X	>>	RPT			
10	REPEAT	POWER	PHONE CLOSE		OK	X	POWER	SEL			

		UNICO DUAL PLUS			TABELLE RADIO RADIO TABLES			23.10.17 REV 1.17 da/from FWP039UNUN57_85		
FUNC.	HARDSTONE 3 HS DPM31 HS DPM61 PHONOCAR VM017 VM018 VM035 IR	HARDSTONE 4 HS DPM36 HS DPM70	HARDSTONE 5 HS CD1970	NOT USED	ALPINE 2 RUE-4912 DVD	ALPINE 3 RUE-4912 NAVI	PANASONIC 3 RM-600D	ECLIPSE 3 RMC101	HARDSTONE 6 HS-DPM7G	NOT USED
	FILO E IR	IR	IR		IR	IR	IR	IR		
FLASH	42	43	44	45 46	47	48	49	50	51	52 53
1	VOLUME —									
2	VOLUME +									
3	SEEK —									
4	SEEK +									
5	SRC	SRC	MODE		SRC	SRC	UP	SRC	MODE	
6	MUTE	MUTE	MUTE		MUTE	UP	DOWN	UP	MUTE/RIFIUTA	
7	BAND	BAND	BAND		UP	DOWN	BAND	DOWN	BAND/	
8	UP	AST	RPT		DOWN	X	PLAY	POWER	RPT	
9	PHONE ANSWER	RPT	SEL		X	X	X	X	SEL	
10	PHONE CLOSE	RDM	NEXT 10 TRACK		X	X	X	X	PWR	


FUNC.	HARDSTONE7 HS DPM8G PHONOCAR N6205	MACROM2 M-DVD5551R M-DVD6545R	PANASONIC4 CQ-D1703N	NOT USED	CASKA CA1621G	MACROM3 M-DVD6555R M-DVD6556R PHONOCAR VM041 IR	MACROM4 M-DVD5542R M-DVD5561R M-DVD5562R FILO E IR M-DVD5541R	NOT USED	ZENEC 3 ZE-NC520 ZE-NC524	BECKER TRAFFIC PRO <small>Solo su richiesta Only on request</small>	QUANTUM
	FILO E IR	IR	IR	57 58 59 60	FILO E IR	FILO E IR		64 65	FILO E IR	FILO	FILO E IR
FLASH	54	55	56		61	62	63	66	67	68	69
1	VOLUME —										
2	VOLUME +										
3	SEEK —										
4	SEEK +										
5	MODE	MODE	SRC/PWR		MODE	SRC	SRC		SRC	MODE	
6	MUTE	MUTE	MUTE		MUTE	MUTE	MUTE		MUTE	X	
7	BAND	RDM	SEL		BAND	UP	PLAY/PAUSE		BAND/STOP	X	
8	RPT	RPT	RDM		>>	DOWN	BAND		DOWN	X	
9	PLAY/PAUSE	PLAY/PAUSE	RPT		<<	PHONE ANSWER	PHONE ANSWER		PHONE AN- SWER	X	
10	POWER	STOP/BAND	SCAN		RPT	PHONE CLOSE	PHONE CLOSE		PHONE CLOSE	X	

FUNC.	PHONOCAR 4 VM050	NOT USED	BLAUPUNKT 2 ATLANTA110 MADRID210 TORONTO410BT SAN FRANCISCO310	PHONOCAR 5 VM066	NOT USED	PHONOCAR 6 VM037	BLAUPUNKT NEW YORK 800 (resistive)	HARDSTONE 8 HS-DPM71 HS-DPM64 HS-DPM69
	FILO E IR	71 72 73	FILO E IR	FILO E IR	76 77 78 79	FILO E IR	FILO	FILO E IR
FLASH	70		74	75		80	81	82
1	VOLUME —							
2	VOLUME +							
3	>> (NEXT TRACK)	SEEK —						
4	> (Radio Tuner)	SEEK +						
5	SRC		SOURCE	SRC		SRC	SRC or PHONE ANSWER	SOURCE/PWR
6	MUTE		MUTE	MUTE		MUTE	MUTE or PHONE CLOSE	MUTE
7	PLAY/PAUSE		UP	PLAY		BAND	X	<<
8	BAND		DOWN	POWER		UP	X	>>
9	PHONE ANSWER		PHONE ANSWER	PHONE ANSWER		DOWN	PHONE ANSWER or SRC	PHONE ANSWER/BACK
10	PHONE CLOSE		PHONE CLOSE	PHONE CLOSE		PLAY	PHONE CLOSE or MUTE	PHONE CLOSE/ROOT

	UNICO DUAL PLUS	TABELLE RADIO RADIO TABLES	23.10.17 REV 1.17 da/from FWP039UNUN57_85
---	------------------------	---------------------------------------	--

FUNC.	PHONOCAR 7 VM033	MACROM 5 M-DVD7702 M-DVD7701 M-DVD7602 M-DVD7601	CLARION 2 NX-501E NX-502E NX-503E NX-404E NX-504E	BLACKSTONE BS-ARM11	RADIO JEEP PHONOCAR	RADIO AUDI A4 PHONOCAR	NOT USED	PHONOCAR 8 VM081
	FILO E IR	IR	FILO E IR	FILO E IR	FILO E IR	FILO E IR		FILO E IR
FLASH	83	84	85	86	87	88	89	90
1	VOLUME —							
2	VOLUME +							
3	SEEK —							
4	SEEK +							
5	SRC	SRC	SOURCE/PWR	SOURCE	SOURCE	SOURCE		SOURCE
6	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE		MUTE
7	BAND	PLAY/PAUSE	RDM	X	X	X		X
8	UP	RIGHT	TA	X	X	X		X
9	DOWN	PHONE ANSWER	PHONE ANSWER	X	PHONE ANSWER	X		PHONE ANSWER
10	ENTER	PHONE CLOSE	PHONE CLOSE/BAND	X	PHONE CLOSE	X		PHONE CLOSE

FUNC.	PHONOCAR 9 RADIO CAPTUR	PHONOCAR 10 VM025 VM026	RADIO AD APPRENDIMENTO RESISTIVO 8 TASTI <i>RADIO WITH RESISTIVE LEARNING SYSTEM 8 BUTTONS</i>	NOT USED	PHONOCAR 11 VM057
	FILO E IR	FILO E IR	FILO		FILO
FLASH	91	92	93	94	95
1	VOLUME —				
2	VOLUME +				
3	SEEK —				
4	SEEK +				
5	SOURCE	SOURCE	SRC	X	SOURCE
6	MUTE	MUTE	MUTE	X	MUTE
7	PLAY/PAUSE	X	X	X	UP
8	RPT	X	X	X	DOWN
9	PHONE ANSWER	X	PHONE ANSWER	X	PHONE ANSWER
10	PHONE CLOSE	X	PHONE CLOSE	X	PHONE CLOSE

	<p>UNICO DUAL PLUS</p>	<p>TABELLE RADIO RADIO TABLES</p>	<p>23.10.17 REV 1.17 da/from FWP039UNUN57_85</p>
---	-------------------------------	--	---

COLLEGAMENTI ECLIPSE FILARE (numero lampeggi 20):

AVN2227P: marrone tacche grigie (radio) va con il Viola (interfaccia)/ marrone tacche grigie - Nero (radio) va con il Marrone (interfaccia).

AVN4429 e AVN726EE: marrone tacche grigie (radio) va con il Marrone (interfaccia)/ marrone tacche grigie - Nero (radio) va con il Viola (interfaccia).

ECLIPSE WIRE CONNECTION (number flashes 20):

AVN2227P: brown - gray (radio) with violet (interface)/ brown—gray - black (radio) with brown (interface).

AVN4429 e AVN726EE: brown - gray (radio) with brown (interface)/ brown - gray - black (radio) with violet (interface).

ATTENZIONE

I PROFILI 4 (PIONEER), 5 (SONY) , 7 (VDO) E 20 (ECLIPSE) SI ESCLUDONO A VICENDA.

NON INSERIRE IL PONTICELLO J5 PER BLAUPUNKT 2 (ATLANTA110-MADRID210-TORONTO 410 BT, SAN FRANCISCO 310) E BLAUPUNKT NEW YORK 800.

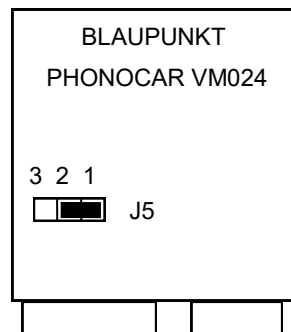
⁽¹⁾ LA RADIO PHONOCAR VM029 HA SOLO LE SEGUENTI FUNZIONI: VOLUME-, VOLUME+, SEEK-, SEEK+, MODE E MUTE.

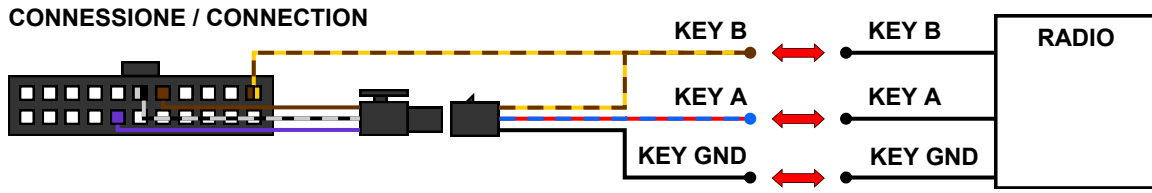
 
CAUTION

PROFILES 4 (PIONEER), 5 (SONY), 7 (VDO) AND 20 (ECLIPSE) ARE MUTUALLY EXCLUSIVE.

THE JUMPER J5 DOESN'T BE SET IF YOU INSTALL A BLAUPUNKT 2 (ATLANTA 110-MADRID 210- TORONTO 410 BT, SAN FRANCISCO 310) AND BLAUPUNKT NEW YORK 800.

⁽¹⁾PHONOCAR RADIO VM029 HAS ONLY THE FOLLOWING FUNCTIONS: VOLUME-, VOLUME+, SEEK-, SEEK+, MODE AND MUTE.



MODELLO RADIO / RADIO MODEL	ADATTATORE RADIO/ RADIO ADAPTER
CLARION, JVC; MACROM M-DVD5542R, M-DVD5561R, M-DVD5562R; BLAUPUNKT NEW YORK 800; PHONOCAR VM033, VM037, VM029, VM057; CONSOLI 1;	CBL007UNJV12
PIONEER; SONY; PHONOCAR VM040 (flashes 7) , VM041 (flashes 7), **VM024, VM025, VM026; *GRUNDIG DELPHI X350BT, DELPHI X440BT; BLAUPUNKT NEW YORK 800 RESISTIVA; WR9210 RADIO 500.	CBL007UNPI12
ALPINE.	CBL007UNAL22
KENWOOD.	CBL007UNKE11
PANASONIC; PHONOCAR FORYOU, CMU128, CM123, VM020, VM021, DM736, VM016, VM017, VM030, VM031, VM032, VM036, VM050, N6205, VM066, VM081; HARDSTONE HS DPM61, HS DPM62, HS DPM63, HS DPM31, HS DPM7G, HS DPM8G, HS DPM71, HS DPM69, HS DPM64; MACROM M-DVD6555R, M-DVD6556R; RADIO JEEP; RADIO AUDI A4.	CBL007UNPN21
BLAUPUNKT; BLAUPUNKT 2 ATLANTA110, MADRID210, TORONTO410BT, SAN FRANCISCO 310.	CBL007UNBL12
*VDO.	CBL007UNVD11
ECLIPSE AVN2227P, AVN4429, AVN726EE.	CBL007UNEL11
<p>RADIO AD APPRENDIMENTO RESISTIVO 8 TASTI / RADIO WITH RESISTIVE LEARNING SYSTEM 8 BUTTONS</p> <p>CONNESSIONE / CONNECTION</p> 	CBL039UNFY11
<p>BLACHSTONEBS-ARM11</p> <p>Radio ad apprendimento resistivo, si deve impostare sulla radio 10kΩ, il cambio sorgente è sul filo blu della radio (MODE-KEY) da collegare con il nostro marrone, il filo rosa della radio (AD-KEY) va collegato con il nostro viola ed il filo nero della radio con il nostro nero. / Radio resistive to learning, to be set on 10k radio, the transmission source is on the blue wire to the radio (MODE-KEY) to be connected with our brown, the pink wire to the radio (AD-KEY) should be connected with our purple and the black wire to the radio with our black.</p>	
<p>* DISPONIBILE SOLO CON HARDWARE DEDICATO / AVAILABLE ONLY WITH DEDICATED HARDWARE</p>	
<p>** TAGLIARE FILO IN POSIZIONE 2 DEL MICROFIT / TO CUT WIRE IN POSITION 2 OF MICROFIT.</p> 	

Le informazioni riportate in questo manuale e nei suoi allegati sono puramente a scopo informativo pertanto possono subire modifiche senza preavviso. Al momento della pubblicazione le informazioni risultano corrette ed attendibili. Tuttavia Paser non può essere ritenuta responsabile per eventuali conseguenze derivanti da errori, omissioni o incongruenze del presente manuale e dei suoi allegati (ad. es. per l'eventuale mancato recupero di configurazioni audio originali dei veicoli). Paser si riserva il diritto di migliorare/modificare il prodotto o il manuale senza l'obbligo di notifica agli utenti. Information in this guide and its attachments are for information purposes only, therefore, they are subject to change without notice. At the time of publication the information is correct and reliable. However Paser can not be held responsible for any consequences resulting from errors, omissions or incongruence of this manual (for ex. missed audio configuration back-up of the vehicles). Paser reserves the right to improve / change the product or manual without obligation to notify users.